尺寸: 120X175 MM 裝釘方式: 騎馬丁



User Manual





DETLIXX

1. Do not drop, puncture, roll or disassemble the tablet.

except the tip of pen. Keep away things made of metal.

- 2. Avoid all contact with water, and dry hands before using.
- 3. Do not expose to high temperature or leave in direct sunlight. **4.** Use the Tablet with care. Make sure there are no sharp things scratch the Tablet
- **5.** For your own safety, avoid using the Tablet when there is a storm or lightning.
- **6.** Use only the accessories supplied by the manufacturer.
- 7. Keep the Tablet out of the reach of infants.

Troubleshooting for successful installation of the graphic tablet.

Description of problems	Potential causes and solutions
Unsuccessful installation of the driving program	Upon successful installation of the driving board, be sure you do not connect the graphic board, instead, turn the unit on again by following the instructions. The computer comes with a graphic board driving program of other makers that can mean conflicts in identification, remove it before new installation.
No response from the writing graphic board.	Be sure you have plugged the digital board USB cable firmly on an effective USB port and check or replace the battery for the digital pen. Before installation or loading of a driving program software, be sure you remove all existing files before installing the driving program.
Unsuccessful sensing of writing strokes or incorrect clicking (such as leaking inkthe digital pen is not in contact with the graphic board, though there are written marks.)	Insert the digital pen lead and in case of failure of USB cable digital pen, replace the digital pen. Contact the business you bought it for solutions
No response in part of the writing graphic board Displaced writing marks	Contact the business you bought it for solutions.
Unsuccessful use or setting of the graphic board keys or express key	Before installation or loading of a driving program software, be sure you remove all existing files before installing the driving program. *The eraser function keys are made for Adobe Photo Shop, Corel Painter Serial; and as various applicable programs may be defined differently for scrolling, zoom and manual tools, the roller might have different effect in each and every applicable program.

Package Content

Peritab-503 brovad

Please check if the following items are located in your packaging:














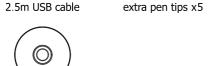








Please contact your dealer immediately if package is incomplete.

 Petuxx









Pen tip remover







is **not** connected to your PC or MAC.











Driver Installation

Before starting with the driver installation please make sure that the tablet

Windows System:

- 1. Insert the Driver CD into your CD drive and wait until the auto start window appears. On Windows Vista and Windows 7 you may confirm the Action by pressing >> Continue << if the User Access Control window appear.
- 2. Simply follow the steps on the screen and finish the installation with restarting your system

MAC System:

- 1. Insert the Driver CD into your CD drive and wait until the Drive
- 2. Click on the Tablet Icon and simply follow the steps on the screen and finish the installation with restarting your system. **Connect your Tablet**

Peritab-503 brovad is made for left and right hand users. To distinguish between both modes, Peritab-503 brovad comes with two USB ports, one for each orientation. It's important to use the correct USB port for the Mode you like to use.



Left hand USB USB Socket Slider Right hand USB port

1. Place the Peritab-503 brovad on your desk in the direction you like to use it.

- 2. Select the USB port like explained in above picture by using the USB Socket Slider.
- 3. Connect the Peritab-503 brovad to your PC or Mac with the supplied USB cable. It's recommended not to connect to Hubs or front USB ports of your PC tower.
- 4. After connection, the Mode Indicator will light up and the Left/Right hand Indicator will light up accordingly .

Petuxx

Knowing your Tablet

responses. The usage is different to mouse usage. The working area is equal with your monitor, you can directly point on the place you like to move the mouse to. If you move the pen to left bottom corner, the pointer on your display directly goes to this



- 2. Hot Keys: Peritab-503 brovad offers 4 progammable Hot Keys. More details on how to program these buttons are explained under >>The Control Panel <<
- 3. Navigation Wheel: The Navigation Wheel can be used for vertical scrolling, Zoon in/out or as volume adjuster. To switch between these three Modes, press the Mode Button in the middle of the Navigation Wheel. The color of Mode Indicator will change to indicate the current Mode:



4. Mode Button Switch





1. Working Area: The working area is the active area where the pen point. This makes work much more efficient and much quicker than using a mouse.







After a time it's necessary to exchange the pen tip. If the tip is not soft any more or leaves scratches(scratch noise) on the graphic tablet it's recommend to exchange the tip to avoid any damage on your tablet.

- 1. Use the pen tip remover tool like a classical tool you know from home. Grap the tip with the open end of the remover tool and pull
- 2. Place the new tip in the pen and gently push it in until the end is reached. Don't use to much pressure to avoid damage of the pen.


The Control Panel

out the tip with care.

This paragraph describes the Windows controlp anel but can be adopt to MAC control panel as well.

After driver installation, restart and successful connection of your Graphic tablet you will find a small Tablet Icon 💆 in the quick start bar close to your clock.Click on the Icon to open the Control Panel.The Control Panel is divided into 4 main parts

1. Pen: This page offers you a wide range of pen settings to customize the pen to your needs. Setup the functions like followed Tablet Properties

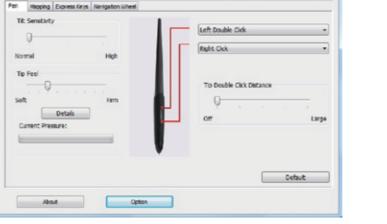


PCILXX

Function	Values	Description
Tilt Sensitivity	Normal ~ High	Adjusts how sensitive the pen reacts on tilt. Important if you like to use the pen like a felt pen.
Tip Feel	Soft ~ Firm	Adjusts the sensitivity of the pen tip and see the result in Current pressure bar. Use >>Details<< to setup more specific values for the pen tip.
Button configuration		Adjusts the function of the two button of pen by choosing from drop-down list.
Tip Double Click Distance	Off ~ Large	Adjusts the time you have for a double click on pen tip. You can also disable the function by choosing off.

2. Mapping : This page offers a function to adjust the area on monitor you'd like to define as active area for the Pen.

Function	Values	Description	
Mode	Pen, Mouse	Select if the tablet should function like a Pen or a mouse.	Switch Prog
Monitor Area All Screens, Monitor, Portion	Monitor,	Select >> All Screens << to define the complete monitor as working area. If you have more than one monitor connected, you can choose >> Monitor <<	Open/Run
	and select which monitor is the active one. If you want to define a specific area of the monitor choose >>	Switch Moni	
		Portion<< and select the active area by dragging the red frame under Working Area Settings<< field.	Disabled
Force Proportions	On, Off	When Force Proportion option is on, Tablet will auto- adjust according to the aspect ratio of PC/NB Monitors to maximize drawing and writing accuracy.	4. Customizing

3. Express Keys: This page allows you to program the Hot Keys of the tablet to your requirements. Simply click on the Key you'd like to modify and choose one option from the drop down box.

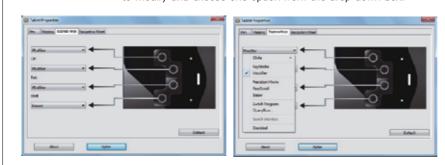

PCILXX

Function	Description		Function	L	
Clicks	Mouse Click]	Scroll		
Key Stroke	Use this function to program free key strokes. Just type in the command in the window and confirm with OK	1	Zoom in/out		
Modifier	Use typical commands like ALT, Tab or CTRL to program on key	1	Volume	+	
Precision Mode	When Precision Mode option is on, Monitor will auto-adjust accroding to the tablet to maximize drawing and writing	1	Switch Program Disabled	H	
Pan/scroll	Use to program Pan or scroll function from your graphic program			_	
Eraser	Program to use Key for eraser function		Note For other custome	or customod	
Switch Program	Enable you to define Keystroke		particu l ar fuctions wh		

Choose to open application from local disk and confirm

It will be focused one of monitor when you use

Customizing the Navigation Wheel: When you select the Navigation Wheel tab, you will see three Modes by different color. For each Mode, there are five alternative options such as scrolling, zooming, volume controller and program keystroke, disabled.

the extend desktop

Disabling the Key



peruxx

Function	Description
Scroll	Sets the roll to scroll up or down
Zoom in/out	Sets the roll to zoom in or out
Volume	Sets the roll to be a voice adjuster
Switch Program	Enable you to define Keystroke
Disabled	Disabling the Wheel

ed functions, you can choose Key stroke to define the particular fuctions which are supported by different applications. For instance, you can set the Keystroke of clockwise as Alt + F13 and anticlockwise as ALT + F14 of the Navigation Wheel, then you will be able to rotate the image in Photoshop by scrolling the Wheel.

Use your pointing device between the boxes and dick OK to accept or Cancel to exit.

Clear Delote Add Special

Cancel OK







